

PC Base Paging System (POCSAG)

(Option with 300 subscribers and 30 can messages data base)

Model No. EM-898 Series

Operation Manual



Wireless Devices Inc. (Taiwan)

The EM-898 paging device series is designed to automatically and instantly page the e-mail subscriber within the coverage area once the P/C or Notebook receives the incoming e-mail messages. Also, you can take it as your owned office paging system.

The EM-898-10 is built-in 10mW Transmitter.

The EM-898-50 is built-in 50mW Transmitter.

The EM-898-100 is built-in 100mW Transmitter.

The EM-898-150 is built-in 150mW Transmitter.



Specifications


Item NO.	EM-898-10/50	EM-898-100	EM-898-150
Frequency:	One Channel from 410MHz to 490MHz by crystals controlled.		
Frequency Stability::	10 ppm at 25°C.	10 ppm at 25°C.	10 ppm at 25°C.
Paging format:	POCSAG		
Baud rate:	512bps / 1200bps / 2400bps.		
Message data:	Numeric or alpha-numeric, max 40 characters per each paging		
RF output	10~50mW	100mW	150mW
Modulation:	FSK,		
Deviation:	4.5Khz		
Operation Temp:	-20°C ~ +70°C.		
Pager Capacity:	from 8 to 2097151 Pager Capcode		
Operating Voltage:	+5V from USB port		
Coverage distance	about 8,000 square Meter	about 50,000 square Meter	about 85,000 square Meter
Size of Housing::	90mm X 23mm X 16mm	90mm X 23mm X 16mm	90mm X 23mm X 16mm
Model Weight:	30gs	32gs	38gs




A. Operation Instructions

1. Connect the EM-898 into the USB port of your P/C or N/B $\,$

- 2. Install the [eMailToPager] software CD execution file into your P/C or N/B
- 3. Click [eMailToPager] icon to run the application software.

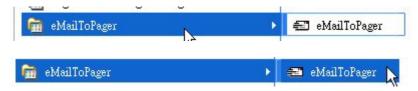


Example Programming Screen as below

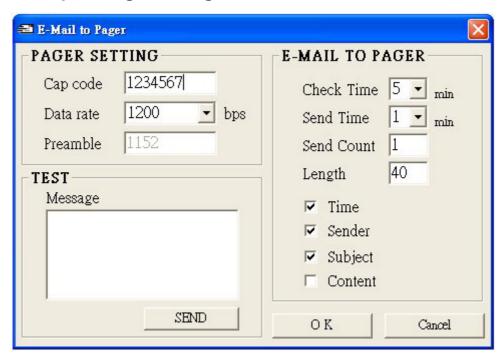

- a. Capcode: This is for 7 digits POCSAG address. And it must be same as the used receiving pager.
- Date rate: This should also be set on the same speed rate with the used pagers.
 And the baud rate is in POCSAG 512bps or 1200bps or 2400bps type only.
- c. Check Time: Check times per minute for your e-mail messages incoming.
- d. **Send Time**: Message forwarding to the receiving pager per set minutes.
- e. Send count: Counting for message forwarding times.
- f. **Length**: Each forwarding alphabet length (maximum in 40 characters).
- g. Time: With or without the forwarding e-mail message containing the actual receiving time.
- h. **sender:** With or without the forwarding e-mail message containing the sender name.
- i. **Subject:** With or without the forwarding e-mail message containing the subject contents.
- j. **Content:** With or without the forwarding e-mail message containing the e-mail contents.
- k. **TEST:** The EM-898 can be operated as a simple on-site office paging transmitter. Simply types in your desired message in this block and click the **[SEND]** icon to start the transmission to pager.

Option [Office Pager] OS operations


- 2. Install the Office Pager software CD execution file into your P/C or N/B
- 3. Click [Office Pager System v1.0] icon to run the application software.

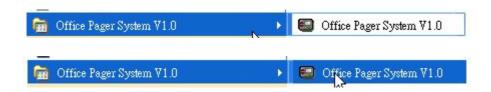

OS set-up



Click [Setting] for contents set-up

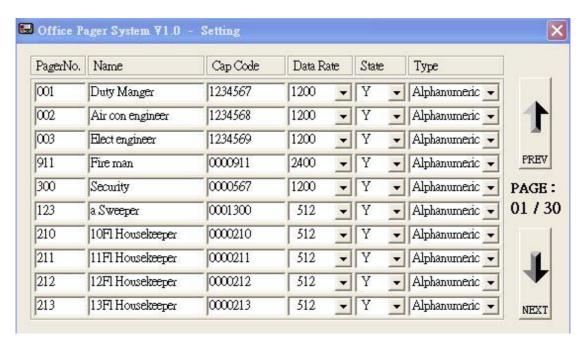

Set-up Pager No. Name, Cap code, data rate, State, and type of message....

State =Y is enable

State =N is disable



Click [Can Msg] icon to set-up the 30 can message files



Click [Save] icon to Save the can message files

Also you can either select the can message or directly key in the message



Click [Send Msg] to sending to pager (on-air)