# Multi line display watch pager User manual

# Read/Escape button Up button Down Button Function/Select button

#### **Content:**

- 1. Turn on /off the pager
- 2. Receive message
- 3. Reading old messages
- 4. Delete or lock messages
- 5. Functions setting
- 6. Low battery and charging.
- 7. Other information.

# 1. Turn on/off pager



Press the Read button for over 3 seconds to turn on the pager When boot, Pager will show some information,

such as software version,

frequency, SN, Then enter standby mode, as photo.

#### 2. Receive message

▲ 01 09:09 28/7
Good morning!

When pager got a new message, it will display automatically. As photo, the first

show time information..

## 3. Reading old messages



In the message display screen, press **Read key** to read message, **up and down key** to

last or next message

 
#### 4.Delete or lock message.



When read message, press Function key will prompt a menu to delete one, delete all

and lock message.

## 5. Functions setting



On standby status, press function key, function menu will shows, as photo. Up

and down key to move cursor, function key to

choice and confirm, read to quit. If need to +numbers, functions key working as +, read key
working as -. The common used functions
include turn pager off / alert mode / set time /
Choose alert ...

# 6. Low battery and charging.



When battery is low power, the battery icon will display blank as photo, also Red LED will be on. You need to charging it or it will stop work.

When charging, a blue LED will be on, if full charge, LED will be off. LCD also show charging information.

Charging photo:



#### Other information:

- Press 3S can on/off backlight if not auto light.
- Low battery will not receive.
- 1 full charging need about 2 hours.
- How to working with buttons please refers to button manual.

The END